


IMPORTANT: ADHESIVE IS A VERY HIGH BONDING TAPE. FOLLOW INSTRUCTIONS PROVIDED CAREFULLY. ANY ATTEMPT TO REMOVE STRIPS WILL CAUSE DAMAGE TO THE FRAME.




SUGGESTION: PRE-POSITION METAL STRIPS ON FRAME PRIOR TO REMOVING PROTECTIVE PAPER FROM ADHESIVE TO ASSURE PROPER ALIGNMENT & FIT.

INSTALLATION
2 TOP AND 4 SIDE STRIPS/ 3 HOOKS

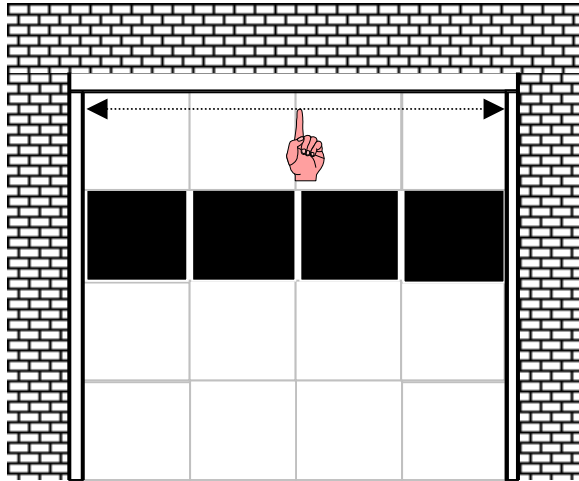


STEP 1

DIVIDE TOTAL WIDTH OF TOP FRAME BY 2 AND PENCIL MARK AT CENTER

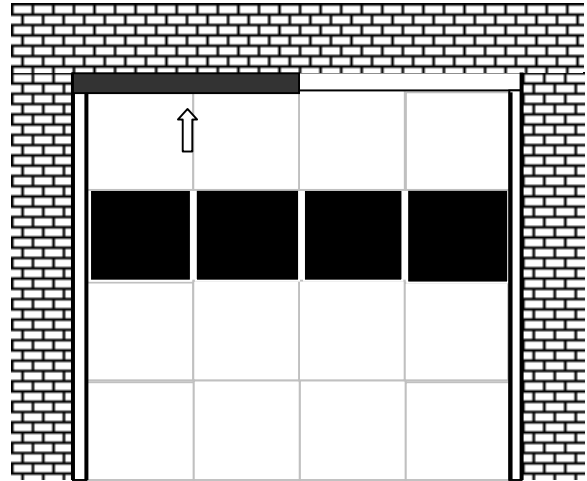


STEP 2

PEEL PROTECTIVE PAPER FROM TOP STRIP, PLACE STRIP AT CENTER PENCIL MARK AND PRESS FIRMLY. REPEAT ON OTHER SIDE

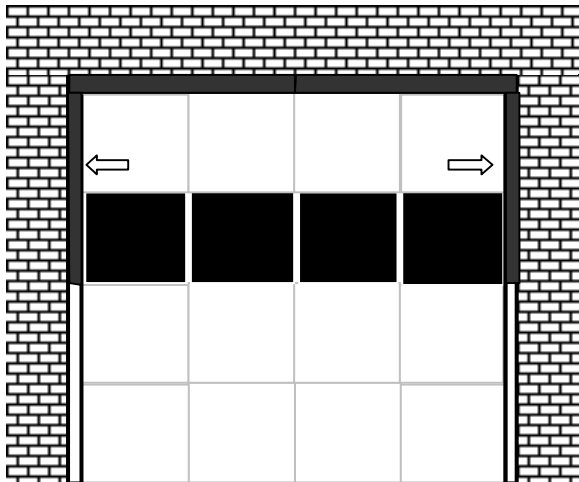

STEP 3

PEEL PROTECTIVE PAPER FROM A SIDE STRIP AND PRESS FIRMLY. REPEAT ON OTHER SIDE

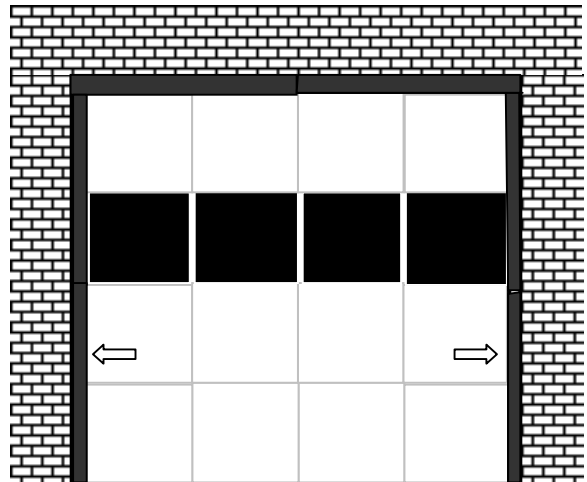

STEP 4

PEEL PROTECTIVE PAPER FROM A SIDE STRIP AND PRESS FIRMLY. REPEAT ON OTHER SIDE

STEP 5

FOR HOOK INSTALLATION ATTACH SCREEN TO METAL STRIPS AND PLACE D-RINGS OVER HOOK TO ASSURE PROPER ALIGNMENT AND DISTANCE. SCREWS ARE SELF-STARTING. JUST PRESS AND SCREW

